



The difference of TM1990A-F5 and i1990A-F5 about ROMCODE

● **i1990A-F5 ROMCODE:**

CRCXXXXXX55AA5501

01 is family code, 55AA55 is code segment, XXXXXX is serial code, CRC is test code. XXXXXX is add one from 000000 to FFFFFFFF, and the segment will add the carry of FFFFFFFF+1.

laser code diagram on the button as follow:

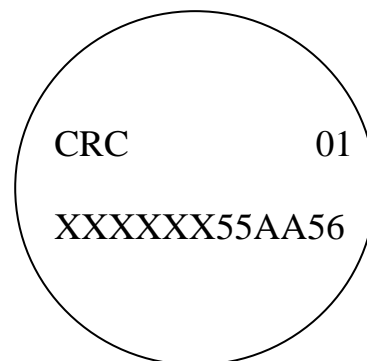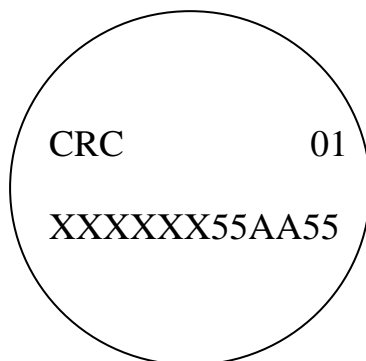

● **TM1990A-F5 ROMCODE:**

CRC000000XXXXXX01

01 is family code, 000000 is code segment, XXXXXX is serial code, CRC is test code. XXXXXX is add one from 000000 to FFFFFFFF, and the segment will add the carry of FFFFFFFF+1. Segment code is from 000000 to FFFFFFFF.

laser code diagram on the button as follow:

